



GLOBAL FURNITURE ALLIANCE

---

ASSEMBLY INSTRUCTIONS

## Houston Dual Powered Zero Gravity Recliner





This product is designed to seat people up to a maximum of 115kgs (18 stone)

Check and re-tighten parts/nuts & bolts every three months

For any assistance with assembly, please contact Global Furniture Alliance on 01291 645080  
Option 2 or email [service@gfa.uk.com](mailto:service@gfa.uk.com)

Alternatively you can go to the following websites:-

- [www.youtube.com](http://www.youtube.com) (YouTube Channel - Global Furniture Alliance)
- [www.gfa.uk.com](http://www.gfa.uk.com) (Product Ranges - Assembly instruction Videos)

**For any missing/damaged parts, please contact your retailer**



## F I R E   R E T A R D A N C Y

GFA's leathers/bonded leathers/PUs/fabrics meet the requirements of BS5852 Part 1 Source 0 ( Cigarette) Ignition Source 1 (Match) as laid out in the UK Furniture and Furnishings (Fire) ( Safety) Regulations 1988 with amendments in 1989, 1993 and 2010.

**Please retain these instructions for future reference and in case of any queries, please quote the following batch number to your retailer.**

**(The batch number is also located on the underside of the seat pad or footstool pad)**

**IMPORTANT:** Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

## S A F E T Y   I N F O R M A T I O N

Identify all the parts and hardware.

Do not discard of the packaging until you have checked that you have all of the parts and hardware required.

Hardware package may have spare parts.

### **WARNING:**

This item contains small parts which can be swallowed by children and pets. Keep children and pets away during assembly.

To avoid danger of suffocation, always keep plastic bags away from children and pets.

We recommend that you assemble this unit on a carpeted floor to avoid scratches.

We do not recommend the use of power tools for assembly as this could damage the unit. Only use manual tools.

Requires 2 people for ease of assembly.

## C A R E   A N D   M A I N T E N A N C E

Wipe regularly with clean water and a damp, clean, soft white cloth

General cleaning can be done as needed with a mild detergent and water solution. Always rinse with clean water and dry

For heavy soiling, dampen a soft white cloth or soft bristle brush. Use care as scrubbing can damage the surface

More difficult stains can be treated, but this should be occasional, not daily, cleaning






**ANY** cleaning solution used must be removed with clean water and a clean white cloth

Cleaning residue left on the material can cause it to dry out and crack, or affect the colour

**DO NOT** use any cleaners with corrosive ingredients (lye, acids or ammonia).


# PRE - ASSEMBLY INFORMATION

## PARTS DESCRIPTION


<p>A</p>  <p>Seat Qty1</p>	<p>B</p>  <p>Chair legs Qty1</p>	<p>C</p>  <p>Chair spindle Qty1</p>
<p>D</p>  <p>Power supply cord Qty1</p>	<p>E</p>  <p>Power supply Qty1</p>	

# ASSEMBLY

## STEP 1

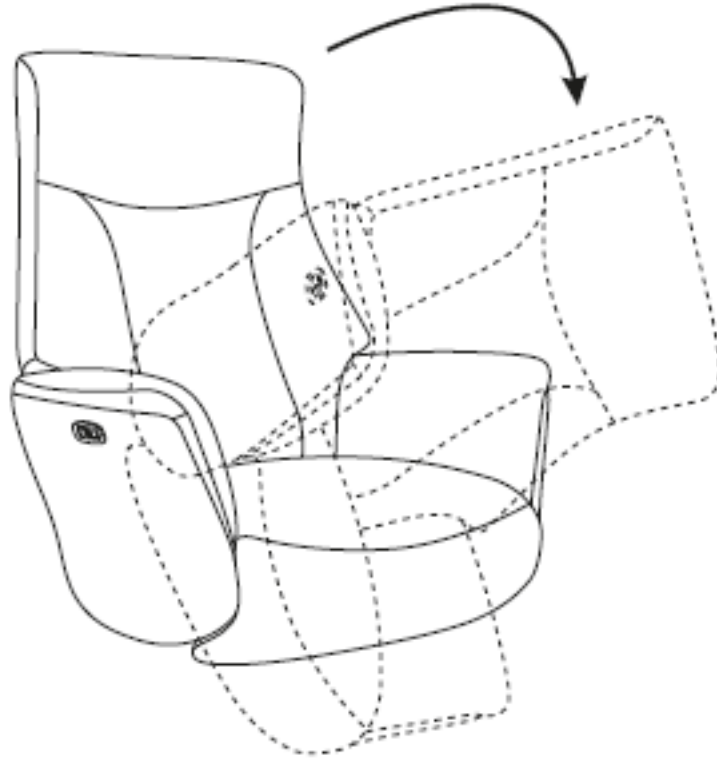


## STEP 2

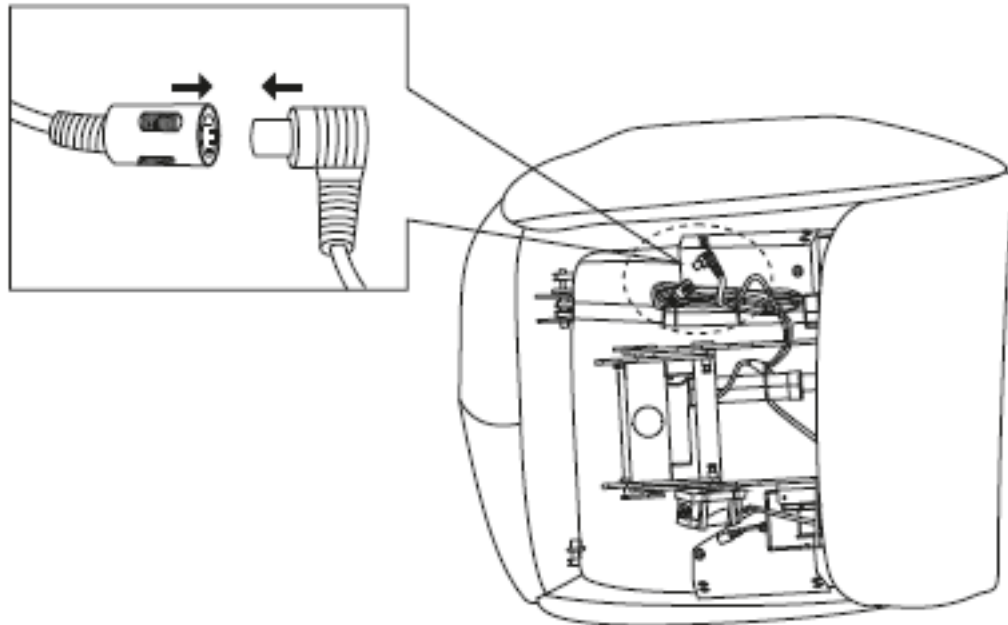

Lay the chair and insert the plug as shown on diagram

# ASSEMBLY

## STEP 3

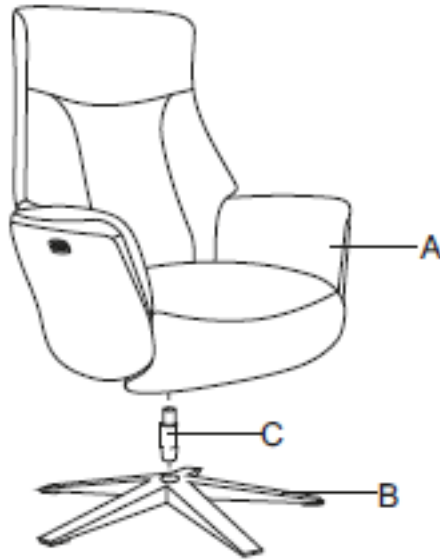


Normal charging procedure:

- 1) Connect the power pack to the charger ensuring the correct port is used. The plug should fit securely in place.
- 2) Connect the mains power cable to the charger and plug the unit into the wall. The charger's LED light will turn on and show RED. The LED light may initially flash during the first few minutes of charging but should become solid RED as the charging process initiates.
- 3) Once the power pack is fully charged, the LED light will turn GREEN indicating the charging cycle is complete. Typical charging time may take approx. 3-6 hours.
- 4) To prevent damage to the battery and to prolong the life of the battery, disconnect the charger once the charging cycle is completed. Additionally, only use the charger specified by OKIN Refined.

# ASSEMBLY


## STEP 4

Be sure to charge the battery first, before using the chair.

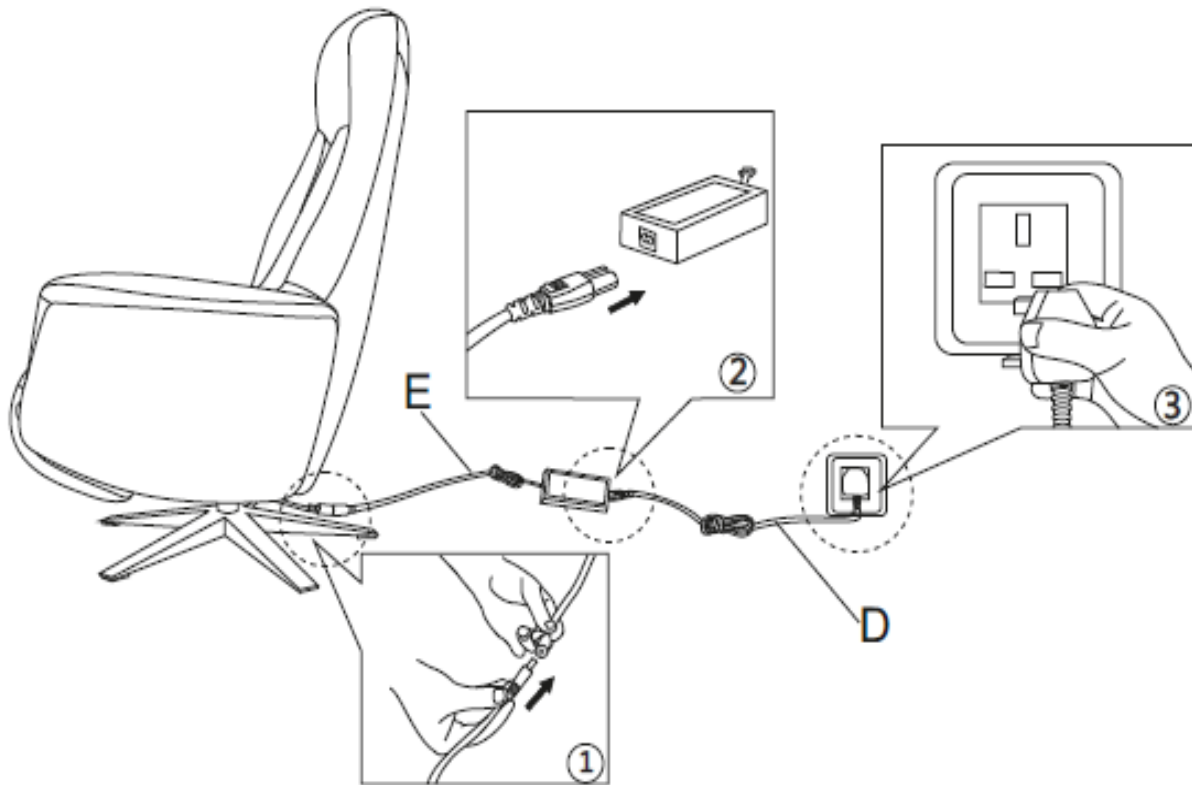

CAUTION: Disconnect AC adapter from power pack once charging cycle is complete


## STEP 5

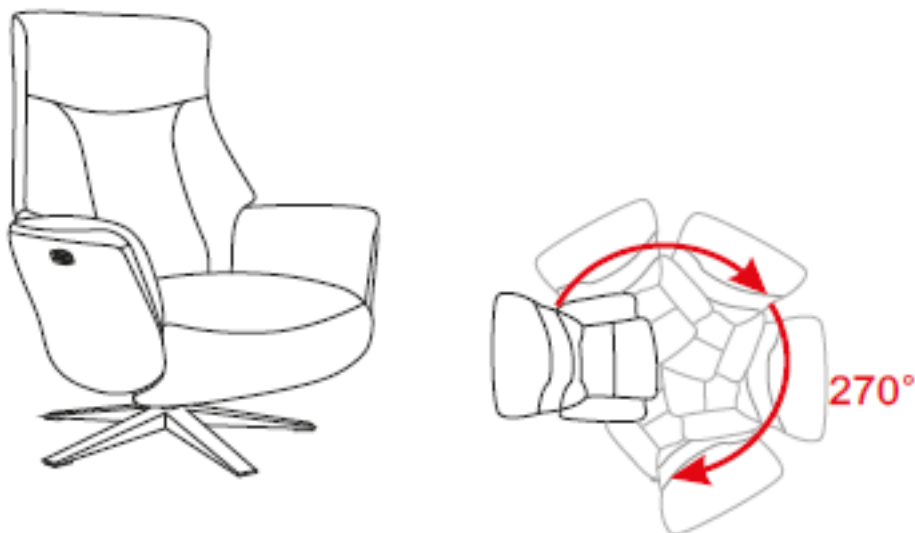

FEATURE: Swivel base - complete 270 degree turning circle


# USER GUIDE

1.

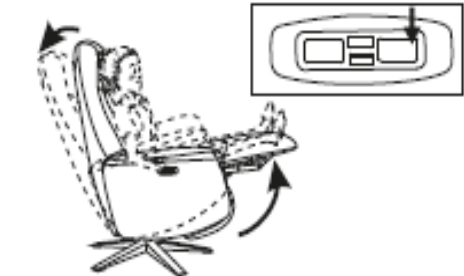


Raises ottoman

2.




Recline chair

3.




Return to upright position

4.

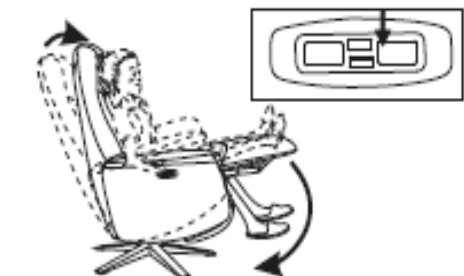

Stow ottoman

5.

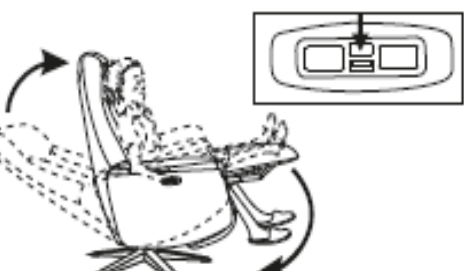

HOME: Return to the upright position and stow the ottoman at the same time



# USER GUIDE

## HOW TO ADJUST THE HEADREST




Grip the backside of the headrest and pull forward from both sides as shown



DO NOT pull from the side edges as the material may tear



To adjust the headrest backwards, push on both sides or use forearm to evenly move the headrest

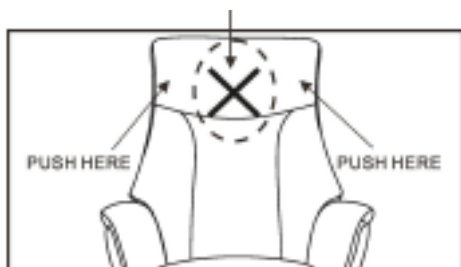









**CAUTION:** Do not push in the centre of the headrest as this may cause the cushion to collapse

# USER GUIDE

## INSTRUCTIONS FOR USING RECHARGEABLE POWER PACK

1. Please read and follow the instructions carefully before initial use of the rechargeable power pack.
2. The power pack typically has about 75% power at the time of manufacturing. Prior to its first use it is important to fully charge the power pack by following the steps listed below.
3. Normal charging procedure;
  - Connect the power pack to the charger ensuring the correct connection port is used. The plug should sit securely in place.
  - Connect the mains power cable to the charger and plug the unit into the wall. The charger's LED light will turn on and show red. The LED light may initially flash during the first few minutes of charging but should become solid red as the charging process initiates.
  - Once the power pack is fully charged the LED light will turn green indicating the charging cycle is complete. Typical charging time may take approximately 3-6 hours.
  - To prevent damage to the battery and to prolong the life of the battery, disconnect the charger once the charging cycle is completed. Additionally, only use the charger specified and by OKIN Refined.
4. Should the power pack not function properly, only a qualified technician is permitted to service the system. The warranty will be void should the unit be tampered with or modified in any way.
5. The power pack will omit an audible low voltage warning where it will beep continuously for 30 seconds once the charge has been depleted below operational levels.
6. The Power Pack has a short circuit protection system. Should the system experience a short circuit situation, power will be cut automatically. An audible short circuit warning beep will be omitted at 30 second intervals and will continue until the cause of the short circuit has been removed.
7. The power pack has an overload protection system. Should the system experience an overload situation, power will be cut automatically. An audible overload warning beep will be emitted for 30 seconds and the system will go into reset once the cause of the overload has been removed.
8. Depending on operational conditions and usage, the power pack can be recharged approx. 300 times.
9. Should the power pack be used in a system consisting of a microprocessor or other kinds of IC such as touch sensors or belt sensors, the battery may require more frequent charging than normal as those systems are always active and continuously consume power from the power pack. In these cases, if it is important to recharge the Power Pack every 1-2months. Should it be anticipated that the system will sit idle for longer than 2 months, it is recommended that the power pack be disconnected from the system to prevent complete depletion of the charge. A power pack coming from storage should be fully charged prior to being connected to a drive or control system.
10. It is possible that after long periods of storage, several cycles of charging and recharging may be required to restore the performance of the battery.
11. A fully charged and unconnected power pack is capable of being stored for up to 6 months when kept in a dry environment with the temperature ranges of 0-45°C (32-113°F).
12. For optimum performance, a power pack should be used at room temperatures ranging from 20-25°C (68-77°F). The operating temperature should never exceed 40°C (104°F).

# SAFETY NOTICES

	<p><b>CAUTION:</b> Leaking batteries present a health hazard and can cause burns to skin and eyes. Battery fluid is harmful when touched or swallowed. If you come into contact with battery fluid, clean the affected area with water and contact a doctor</p>
	<p><b>CAUTION:</b> Keep batteries out of reach of children</p>
	<p><b>CAUTION:</b> Do not open or destroy the battery in any way. Do not expose the battery to heat or to an open flame. Do not solder or weld in the vicinity of the battery</p>
	<p><b>CAUTION:</b> Do not short circuit the battery</p>
	<p><b>CAUTION:</b></p> <ul style="list-style-type: none"> <li>• Immerse the battery in water</li> <li>• The battery should not be exposed to mechanical vibrations</li> <li>• Improper storage can reduce the performance or permanently damage the battery</li> </ul>
	<p><b>NOTICE:</b> The power pack must be charged within six months of the production date and/or charged immediately upon delivery and then after six months of storage. For some drive systems, a minimal level of current may flow even when the drive is not being used. After a prolonged period this can lead to a severely low charge on the battery that may reduce the performance or permanently damage the battery.</p>
	<p><b>CAUTION:</b> The connection cable for the battery should be disconnected from the control unit or drive if the system will not be used for an extended period of time. This will reduce the rate at which the battery will lose its charge.</p>
	<p>The battery should be disposed of properly. Do not dispose with normal household waste!</p>

# WARRANTY

Thank you for purchasing a product from Global Furniture Alliance. These products have been made to demanding, high-quality standards and are guaranteed for domestic use against manufacturing faults for a period of 12 months from the date of purchase.

This warranty does not affect your statutory rights.

We reserve the right to repair or replace the defective product, at its discretion.

This product is guaranteed for 12 months if used for normal purposes. Any warranty is invalid if the product has been overloaded or subject to neglect, improper use or an attempted repair by other than an authorized agent. Heavy-duty or daily professional/commercial usage are not guaranteed.

Due to continuous product improvement, we reserve the right to change the product specifications without prior notice.