















(1) This product is designed to seat people up to a maximum 115kgs (18Stone)

(2) Check and re-tighten parts every three months


(3) For any assistance with assembly, please contact Global Furniture Alliance Ltd: 01291 645080 Ext 2 or email service @gfa.uk.com

(4) For any missing / damaged parts please contact your retailer

Please retain these instructions for future reference and in case of query please quote the following batch number to your retailer. (The batch number is also located under the seat or footstool pad)

A 42mm  X2	B 16mm  X4	C  X1	D 60mm  X1	E 4mm  X1	F 5mm  X1	G  X1
H  X1	I  X1	J  X1	K  X1	L  X1	M  X1	N  X1

A. SCREW (42MM)	2	H. HEADREST	1
B. SCREW (16MM)	4	I. RHF ARM	1
C. WASHER	1	J. CHAIR SPINDLE	1
D. SCREW (60MM)	1	K. CHAIR BASE	1
E. ALLEN WRENCH-4MM	1	L. F/S SPINDLE	1
F. ALLEN WRENCH-5MM	1	M. F/S PAD	1
G. SEAT PAD	1	N. F/S BASE	1

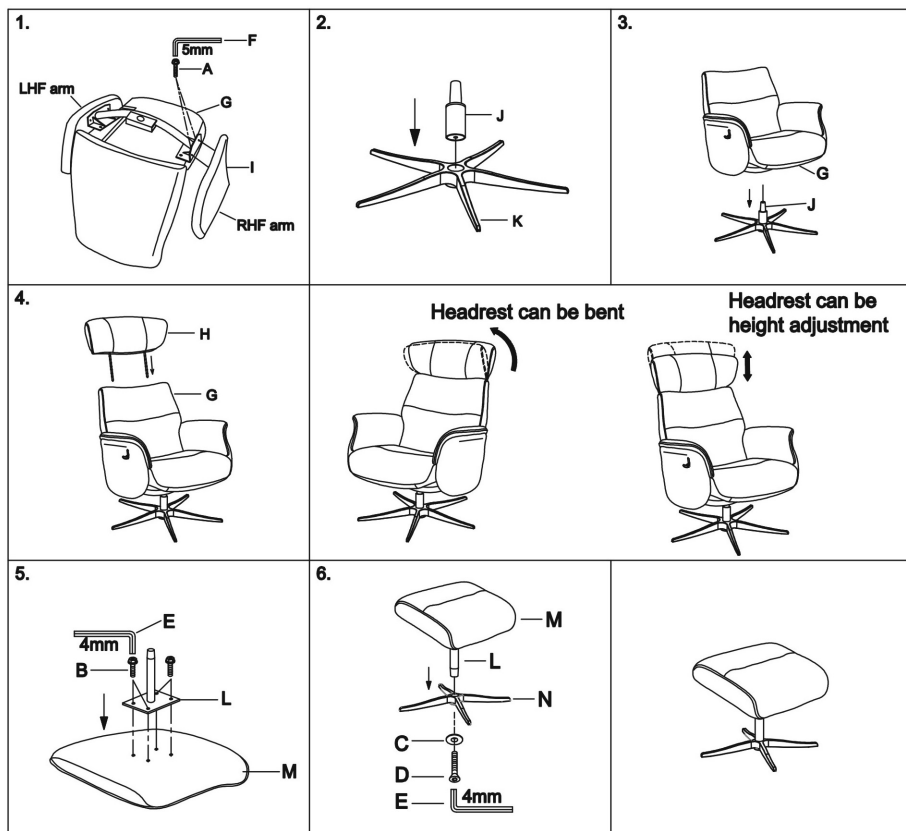

Assembly Instructions

1. ATTACH RHF ARM (I) TO THE METAL BRACKET OF THE SEAT PAD (G) BY USING 2 SCREWS (A). FULLY TIGHTEN BY USING ALLEN WRENCH-5MM (F).
2. INSERT THE CHAIR SPINDLE (J) INTO THE HOLES OF THE CHAIR BASE (K).
3. PUT THE METAL BRACKET OF THE SEAT PAD (G) OVER THE CHAIR SPINDLE (J).
4. INSERT THE IRON ROD OF HEADREST (H) INTO THE UPPER HOLE OF SEAT PAD TO COMPLETE THE CHAIR ASSEMBLY.
5. ATTACH THE F/S SPINDLE (L) TO THE F/S PAD (M) BY USING 4 SCREWS (B). TIGHTEN FULLY BY USING ALLEN WRENCH-4MM (E).
6. INSERT THE F/S SPINDLE (L) INTO THE HOLES OF THE F/S BASE (N). ATTACH THE WASHER (C) TO THE F/S SPINDLE (L) BY USING 1 SCREW (D). TIGHTEN FULLY BY USING ALLEN WRENCH (E) TO COMPLETE THE F/S ASSEMBLY.